

Thanks for selecting JMC stepper motor driver. We hope that the superior performance, outstanding quality, excellent cost performance of our product can help you accomplish your motion control project.

The content in this manual has been carefully prepared and is believed to be accurate, but no responsibility is assumed for inaccuracies.

All the contents of this manual, copyright is owned by the Shenzhen JUST MOTION CONTROL electromechanical Co., Ltd. Without JMC permission, no unit or individual is allowed to copy.

Shenzhen Just Motion Control
Electro-mechanics Co., Ltd

Version	Editor	Verifier
V1.11	R&D	R&D

Contents

1. Overview	- 4 -
2. Features.....	- 5 -
3. Ports Introduction.....	- 6 -
4. Technological Index.....	- 8 -
5. Connections to Control Signal.....	- 9 -
6. DIP Switch Setting.....	- 14 -
7. Faults alarm and LED flicker frequency.....	- 15 -
8. Appearance and Installation Dimensions.....	- 18 -
10. Parameter Setting	- 18 -
11. Processing Methods to Common Problems and Faults-	25

-

1. Overview


The iHSS42-XX Integrate Stepper Servo Motor is merged the stepper servo driver and motor together. This motor system integrates the servo control technology into the digital stepper drive perfectly. And this product adopts an optical encoder with high speed position sampling feedback of $50\mu\text{s}$, once the position deviation appears, it will be fixed immediately. This product is compatible the advantages of the stepper drive and the servo drive, such as lower heat, less vibration, fast acceleration, and so on.

2. Features

- ◆ Integrated compact size for saving mounting space
- ◆ Without losing step, High accuracy in positioning
- ◆ 100% rated output torque
- ◆ Variable current control technology, High current efficiency
- ◆ Small vibration, Smooth and reliable moving at low speed
- ◆ Accelerate and decelerate control inside, Great improvement in smoothness of starting or stopping the motor
- ◆ User-defined micro steps
- ◆ No adjustment in general applications
- ◆ Over current, over voltage and over position error protection
- ◆ Green light means running while red light means protection or off line


3. Ports Introduction

3.1 ALM signal output ports

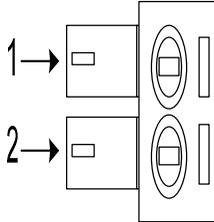


Symbol	Name	Remark
ALM+	Alarm output +	
ALM-	Alarm output -	
PED-	Arrive position output-	
PED+	Arrive position output+	

3.2 Control Signal Input Ports

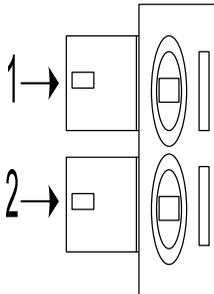

Symbol	Name	Remark
ENA-	Enable signal -	Compatible with 5V or 24V
ENA+	Enable signal +	
DIR-	Direction signal-	
DIR+	Direction signal+	
PUL-	Pulse signal -	
PUL+	Pulse signal +	

3.3 Power Interface Ports




Symbol	Name
VCC	Input power
GND	Input power ground

4. Technological Index

Input Voltage		20~50VDC(24V Typical)
Output Current		4.5A 20KHz PWM
Pulse Frequency max		200K
Communication rate		57.6Kbps
Protection		<ul style="list-style-type: none"> ● Over current peak value 8A±10% ● Over voltage value 70V ● The over position error range can be set through the HISU
Environment Specifications	Environment	Avoid dust, oil fog and corrosive gases
	Operating Temperature	70°C MAX
	Storage Temperature	-20°C ~+65°C
	Humidity	40~90%RH
	Cooling method	Natural cooling or forced air cooling

5. Connections to Control Signal

5.1 Connections to Common Anode

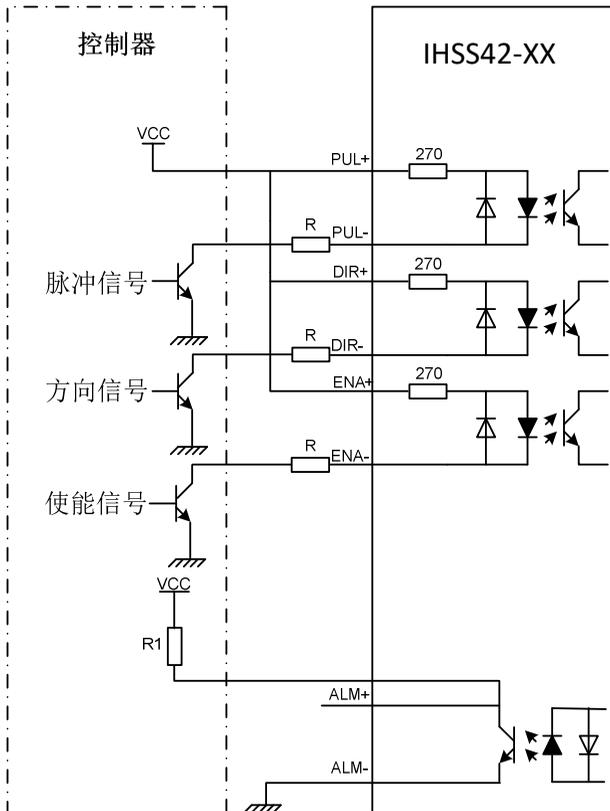


Remark:

VCC is compatible with 5V or 24V;

R(3~5K) must be connected to control signal terminal.

5.2 Connections to Common Cathode

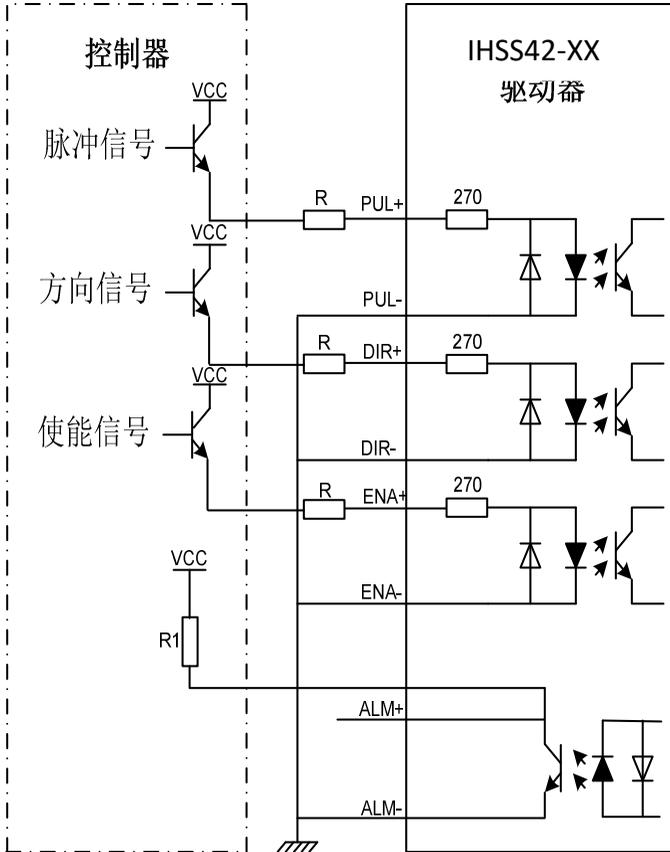


Remark:

VCC is compatible with 5V or 24V;

R(3~5K) must be connected to control signal terminal.

5.3 Connections to Differential Signal

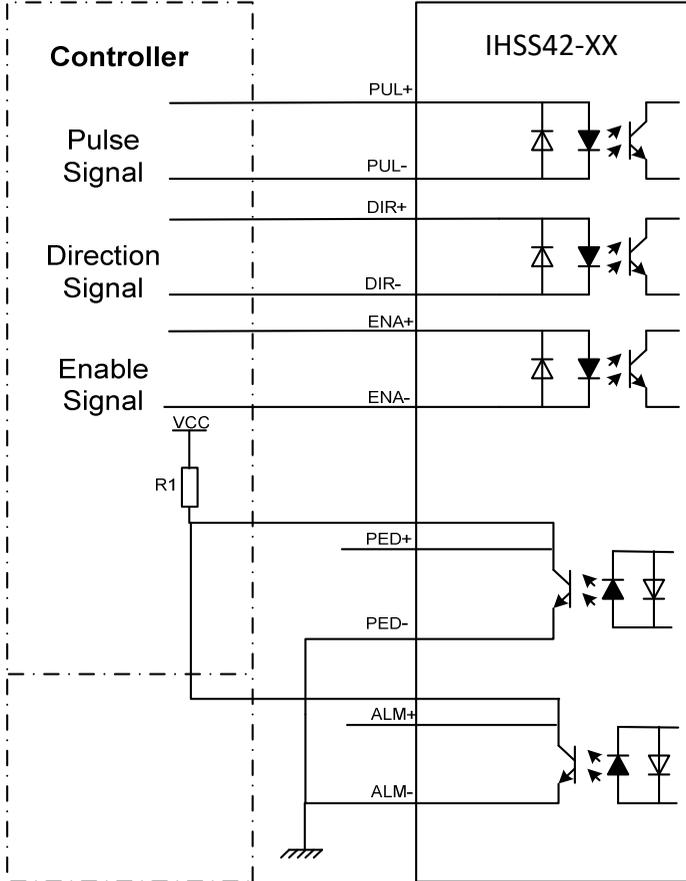


Remark:

VCC is compatible with 5V or 24V;

R(3~5K) must be connected to control signal terminal.


5.4 Connections to 232 Serial Communication Interface

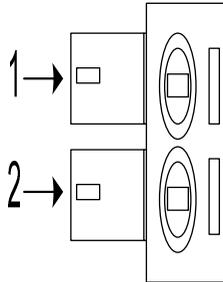

Definition	Remark
NC	Reserved
RX	Receive Data
GND	Power Ground
TX	Transmit Data
+5V	Power Supply to HISU

5.5 Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA should abide by some rules, shown as following diagram:

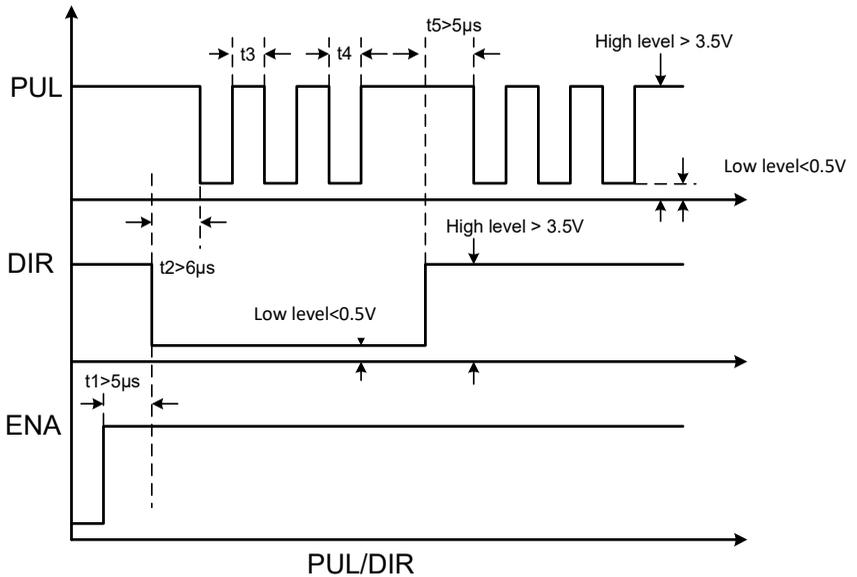

Remark:

- t_1 : ENA must be ahead of DIR by at least $5\mu\text{s}$. Usually, ENA+ and ENA- are NC (not connected).
- t_2 : DIR must be ahead of PUL active edge by $6\mu\text{s}$ to ensure correct direction;
- t_3 : Pulse width not less than $2.5\mu\text{s}$;
- t_4 : Low level width not less than $2.5\mu\text{s}$.

6. DIP Switch Setting

6.1 Micro steps Setting

The micro steps setting is in the following table, while SW1、SW2、SW3、SW4 are all on, the internal default micro steps inside is activate, this ratio can be setting through the HISU.

Dial switch Micro steps	SW1	SW2	SW3	SW4
Default	on	on	on	on
800	off	on	on	on
1600	on	off	on	on
3200	off	off	on	on
6400	on	on	off	on
12800	off	on	off	on
25600	on	off	off	on
51200	off	off	off	on
1000	on	on	on	off
2000	off	on	on	off
4000	on	off	on	off
5000	off	off	on	off
8000	on	on	off	off
10000	off	on	off	off

20000	on	off	off	off
40000	off	off	off	off

6.2 PUL Mode Setting

SW5 is used for setting the PUL mode, “off” means the PUL mode is pulse + direction mode, “on” is double pulse mode.

SW5	Off	on
	Pulse + Direction mode	Double pulse mode

6.3 Running Direction Setting

SW6 is used for setting the running direction, “off” means CCW, while “on” means CW.

SW6	Off	on
	CCW	CW

6.4 PUL Filter Setting

SW7	Off	on
	Maximum PUL frequency is 200K	Maximum PUL frequency is 100K


Note: When the P22 parameter is 0, the pulse filtering degree is controlled by the SW7 pulse interference filtering dialing code; when set to other non-zero values, SW7 does not work.

6.5 PUL Smoothing Setting

SW8	Off	on
	Shut down PUL Smoothing	Switch on PUL Smoothing


The smoothness of the command can be set by the P19 parameter
(Note: the dialing code needs to be in the on state when the P19
parameter is set)

7. Faults alarm and LED flicker frequency

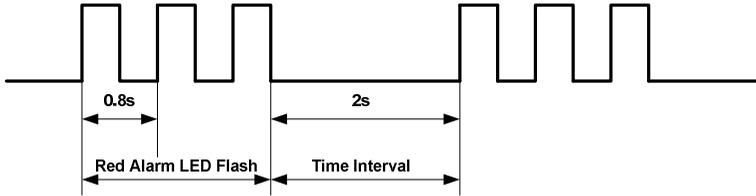

Flicker Frequency	Description to the Faults
1	Error occurs when the motor coil current exceeds the drive's current limit.
2	Voltage reference error in the drive
3	Parameters upload error in the drive
4	Error occurs when the input voltage exceeds the drive's voltage limit.
5	Error occurs when the actual position following error exceeds the limit which is set by the position error limit .

8. Appearance and Installation Dimensions

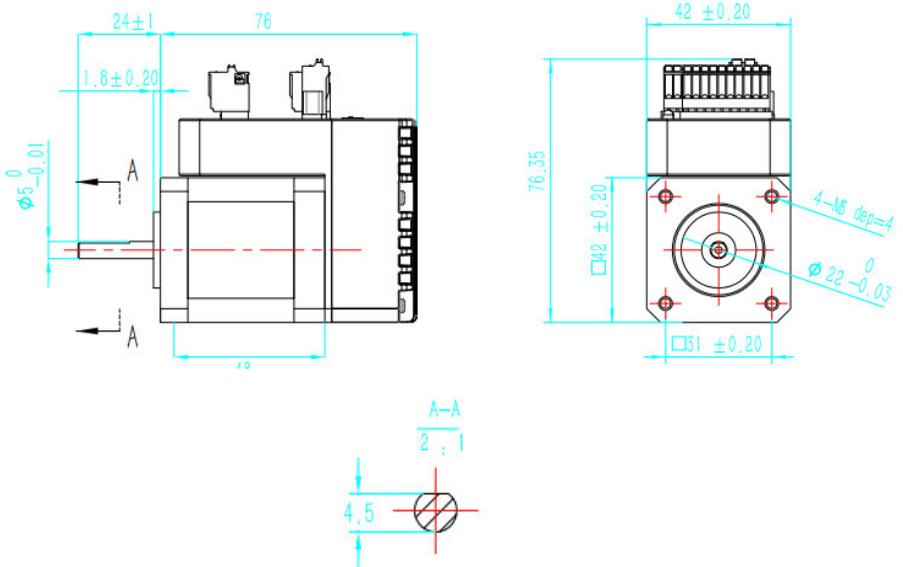

10. Parameter Setting

The parameter setting method of 2HSS57-KH drive is to use a HISU adjuster through the 232 serial communication ports, only in this way can we setting the parameters we want. There are a set of best default parameters to the corresponding motor which are carefully adjusted by our engineers, users only need refer to the following table, specific condition and set the correct parameters.

Actual value = Set value × the corresponding dimension

Mode	Definition	Range	Dimension	Restart Drive	Default Value
P1	Current loop Kp	0—4000	0.0001	Y	1000

P2	Current loop Ki	0—2000	0.0001	N	100
P3	Damping coefficient	0—1000	0.0001	N	30
P4	Position loop Kp	0—5000	0.001	N	2000
P5	Position loop Ki	0—1000	0.01	N	200
P6	Speed loop Kp	0—5000	0.00001	N	300
P7	Speed loop Ki	0—5000	0.00001	N	1000
P8	Open-loop current	0—60	0.1	N	5
P9	Close-loop current	0—40	0.1	N	8
P10	Alarm level	0—1	1	Y	1
P11	Direction level	0—1	1	N	1
P12	trigger pulse selection	0—1	1	Y	0
P13	Enable level	0—1	1	N	1
P14	Arrival level	0—1	1	Y	1
P15	Encoder line number	0—1	1	Y	0
P16	Position error limit	0—3000	10	N	400
P17	Micro-Steps Selection	0—15	1	Y	2
P18	Single and double pulse mode setting	0—1	1	Y	0
P19	Speed	0—10	0	N	7

	smoothness				
P20	User-defined Micro Steps	4—1000	50	Y	8
P21	Power on display	0—4	1	N	0
P22	Pulse filtering	0—1000	4	Y	0
P23	Driver enable lock	0—1	1	N	0
P24	Reservation	Reservat ion	Reservation	Reservation	Reservation
P25	Open and closed loop ratio	0—40	1	N	20
P26	Pend output threshold	0—1000	1	N	10
P27	Open loop or Close loop	0—1	1	Y	1
P28	Reservation	Reservat ion	Reservation	Reservation	Reservation
P29	Reservation	Reservat ion	Reservation	Reservation	Reservation
P30	Close the function of detect the lack of Phase	0—1	1	Y	0
P31	Reservation	Reservat ion	Reservation	Reservation	Reservation
P32	Reservation	Reservat ion	Reservation	Reservation	Reservation

P33	Reservation	Reservat ion	Reservation	Reservation	Reservation
P34	Reservation	Reservat ion	Reservation	Reservation	Reservation
P35	Reservation	Reservat ion	Reservation	Reservation	Reservation
P36	Reservation	Reservat ion	Reservation	Reservation	Reservation
P37	Reservation	Reservat ion	Reservation	Reservation	Reservation
P38	Reservation	Reservat ion	Reservation	Reservation	Reservation
P39	Reservation	Reservat ion	Reservation	Reservation	Reservation

There are total 20 parameter configurations, use the HISU to download the configured parameters to the drive, the detail descriptions to every parameter configuration are as follows:


Item	Description
Current loop Kp	Increase Kp to make current rise fast. Proportional Gain determines the response of the drive to setting command. Low Proportional Gain provides a stable system (doesn't oscillate), has low stiffness, and the current error, causing poor performances in tracking

	<p>current setting command in each step. Too large proportional gain values will cause oscillations and unstable system.</p>
Current loop Ki	<p>Adjust Ki to reduce the steady error. Integral Gain helps the drive to overcome static current errors. A low or zero value for Integral Gain may have current errors at rest. Increasing the integral gain can reduce the error. If the Integral Gain is too large, the system may “hunt” (oscillate) around the desired position.</p>
Damping coefficient	<p>This parameter is used to change the damping coefficient in case of the desired operating state is under resonance frequency.</p>
Position loop Kp Position loop Ki	<p>The PI parameters of the position loop. The default values are suitable for most of the application, you don't need to change them. Contact us if you have any question.</p>
Speed loop Kp Speed loop Ki	<p>The PI parameters of the speed loop. The default values are suitable for most of the application, you don't need to change them. Contact us if you have any question.</p>
Open loop current	<p>This parameter affects the static torque of the motor.</p>

Close loop current	This parameter affects the dynamic torque of the motor. (The actual current = open loop current + close loop current)
Alarm Control	This parameter is set to control the Alarm optocoupler output transistor. 0 means the transistor is cut off when the system is in normal working, but when it comes to fault of the drive, the transistor becomes conductive. 1 means opposite to 0.
Stop lock enable	This parameter is set to enable the stop clock of the drive. 1 means enable this function while 0 means disable it.
Enable Control	This parameter is set to control the Enable input signal level, 0 means low, while 1 means high.
Arrival Control	This parameter is set to control the Arrival optocoupler output transistor. 0 means the transistor is cut off when the drive satisfies the arrival command, but when it comes to not, the transistor becomes conductive. 1 means opposite to 0.
Position error limit	The limit of the position following error. When the actual position error exceeds this value, the drive will go into error mode and the fault output will be activated. (The actual value = the set value \times 10)

Speed smoothness

This parameter is set to control the smoothness of the speed of the motor while acceleration or deceleration, the larger the value, the smoother the speed in acceleration or deceleration.

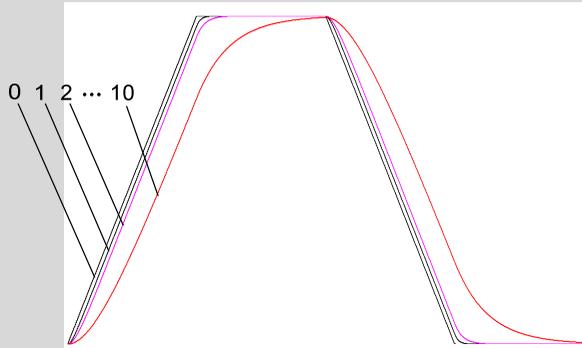

User-defined p/r

This parameter is set of user-defined pulse per revolution, the internal default micro steps inside is activate while SW1、SW2、SW3、SW4 are all on, users can also set the micro steps by the outer DIP switches. (The actual micro steps = the set value \times 50)

11. Processing Methods to Common Problems and Faults

11.1 Power on power light off

- No power input, please check the power supply circuit. The voltage is too low.

11.2 Power on red alarm light on

- Please check the motor feedback signal and if the motor is connected with the drive.
- The stepper servo drive is over voltage or under voltage. Please lower or increase the input voltage.

11.3 Red alarm light on after the motor running a small angle

- Please check the parameter in the drive if the poles of the motor and the encoder lines are corresponding with the real parameters, if not, set them correctly.
- Please check if the frequency of the pulse signal is too fast, thus the motor may be out of it rated speed, and lead to position error.

11.4 After input pulse signal but the motor not running

- Please check the input pulse signal wires are connected in reliable way.
- Please make sure the input pulse mode is corresponding with the real input mode.